


Poleplate Charge Amps Dawn

E-nr: 27 005 89

Assembly instructions

Fasteners included for mounting

4 pcs carriage bolt	M6x20
4 pcs nut	M6
4 pcs washer	M6

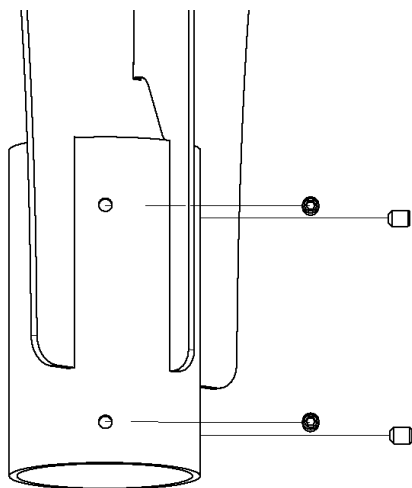

Mounting on tubular pole

1. Loosen the screws for the tube bracket.
2. Place the Poleplate on the tubular pole.
3. Mount the unit vertically.
4. Tighten the screws.

Mounting charging box

1. Insert the carriage bolts from behind.
2. The washers and nuts are attached on the inside of the charging box.
3. Connect the charging box according to the charging box manual and complete the installation.

